

PAYMENT TERMINAL USER GUIDE

IWL220 GPRS/BLEETOOTH



Payment terminals department: +371 67652268
(on business days 9:00-20:00, other days 10:00-17:00)

Customer support: +371 67652267
(24/7 support available in languages: English, Russian, Estonian)

Email: pos_lv@estcard.ee

Nets Estonia AS
Tartu mnt 63, 10115 Tallinn


CONTENTS

1. PREPARATION OF A NEW PAYMENT TERMINAL FOR OPERATION	3
2. SALES TRANSACTION WITH A CHIP CARD	4
2.1 SALES TRANSACTION.....	4
2.2 VERBAL AUTHORIZATION	5
2.3 REVERSAL	6
3. SALES TRANSACTION WITH A CONTACTLESS CARD	7
3.1 SALES TRANSACTION.....	7
3.2 VERBAL AUTHORIZATION	9
3.3 REVERSAL	9
4. SALES TRANSACTION WITH A MAGSTRIPE CARD	11
4.1 SALES TRANSACTION.....	11
4.2 VERBAL AUTHORIZATION	12
4.3 REVERSAL WITH A MAGSTRIPE CARD	12
5. REPEATED PRINTOUT	14
6. REPORTS.....	14
7. CLOSING THE DAY	15
7.1 AUTOMATIC SENDING OF TRANSACTIONS.....	15
7.2 SENDING TRANSACTIONS MANUALLY.....	15
8. REPLACEMENT OF THE PAPER ROLL	16

1. PREPARATION OF A NEW PAYMENT TERMINAL FOR OPERATION

- Take the terminal and the charging station out of the packaging
- **Your new payment terminal is already prepared for operation. There is no need to change any data in the terminal or upload any new software.**
- **In case of a BLUETOOTH terminal**, connect the computer network cable to ETHERNET slot on the charging station
- Connect the power source connector to the charging station. Connect the power source jack to the electricity network.

Connection slots on the charging station

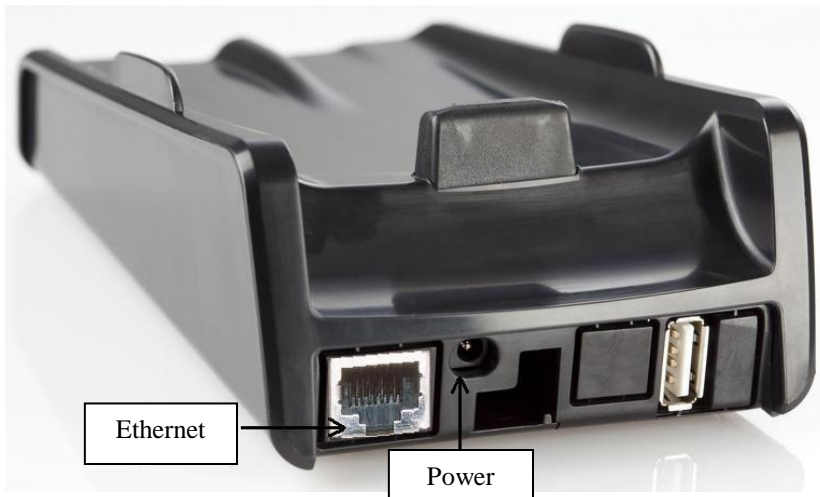

Menu keys




Restart

To perform restart simultaneously press on the YELLOW and POINT buttons.

2. SALES TRANSACTION WITH A CHIP CARD

2.1 SALES TRANSACTION

ACTION	TERMINAL
The terminal is in the standby mode.	Laipni lūdzam!
Enter the sum of the transaction as a final sum. For instance, 319 (3.19 EUR) Then press the green key (ENTER).	SUMMA (EUR) Ievadiet summu... 3.19
The sum and the contactless payment logo are displayed on the screen. <ul style="list-style-type: none"> Ask the customer to insert the chip card in the reader 	Uzrādiet karti 3.19 EUR 
Where the terminal prompts to select the language, the card owner shall use arrows on the key bar to select the suitable language and then press the green key (ENTER) to confirm.	Izvēlieties valodu English Estonian Russian Latvian
Where the card has several functions, they will be shown on the screen. The card owner shall use arrows on the key bar to select the suitable function and then press the green key (ENTER) to confirm. Where the card has only one function, no choice is presented on the screen.	Izvēlieties AID VISA CREDIT VISA DEBIT
Where the terminal asks for the PIN code the customer shall enter the PIN code using the keys. <ul style="list-style-type: none"> Where the code was entered incorrectly, the yellow button may be used to delete the numbers and the PIN code then may be entered once again. Where the terminal does not ask for the PIN code, no respective message appears on the screen. 	Ievadiet PIN 3.19 EUR -

The terminal shall perform automatic control and the following information will appear on the screen:

Where the PIN code was entered correctly, the terminal connects to the control center and performs automatic control.	PIN kods pareizs
The terminal receives response from the control center.	Gaidām atbildi... Lūdzu, uzgaidiet
Remove the card from the terminal.	Trans. Pabeigta Paņemiet karti
At the end of the transaction the terminal asks confirmation for printing of the receipt. When the red button is pressed the buyer's receipt is not printed.	Paņemiet kvīti un spied taust

Seller's receipt

KARTES APMAKSAS KVĪTS
Terminals

KOMPĀNIJA NOSAUKUMS
ADRESE
Termināls: HPC11111 Reģ.: 12345673 Kase: 101
Maksājumu karte

VISA
AID: A0000000012345
PAN: *****0017
CID: 40 TC:95D248A23412E422
TVR: 0000000000 TSI:0000 CVMR:000000

TRANSAKCIJA

Kvīts:123456 Laiks:12.11.2013 13:28:04
Autoriz. nr.: 123223 T1

Summa: 3.19 EUR

TRANS. PABEIGTA
PIN PĀRBAUDĪTS

.....

.....

ID karte()Vadītāja apl.() Pase() Cits nr.

Buyer's receipt

Sveicintāti!
KARTES APMAKSAS KVĪTS
Terminals

KOMPĀNIJA NOSAUKUMS
ADRESE
Termināls: HPC11111 Reģ.: 12345673 Kase: 101
Maksājumu karte

VISA
AID: A0000000012345
PAN: *****0017
CID: 40 TC:95D248A23412E422
TVR: 0000000000 TSI:0000 CVMR:000000

TRANSAKCIJA

Kvīts:123456 Laiks:12.11.2013 13:28:04
Autoriz. nr.: 123223 T1

Summa: 3.19 EUR

TRANS. PABEIGTA
PIN PĀRBAUDĪTS

Saglabājiet kvīti bilances pārbaudei
UZ redzēšanos!

Notes:

THE FIRST RECEIPT IS FOR THE SELLER AND THE SECOND ONE IS FOR THE BUYER

- The transaction can be interrupted by pressing the RED button.
- In case of an error in entering the sum, corrections can be made using the YELLOW button.
- After the terminal controls the PIN code the text “PIN PĀRBAUDĪTS” is printed on the receipt.
- Where the receipt has no place for signature and the document number, the seller shall not ask for a signature and the document number of the card owner.

Where for some reason authorization of the payment terminal fails, the error message is printed out along with the error code and explanation.

2.2 VERBAL AUTHORIZATION

Where for any reason authorization of the transaction fails (the terminal is unable to establish connection with the bank or receive the respective answer from the bank) the terminal may ask the seller “Zvaniet bankai”

If the seller selects “Jā” (presses the green button) the terminal prints out the necessary transaction details that should be provided to the customer service by calling Nets Estonia AS at 6 765 2267.	Referral Zvaniet bankai Nē Jā
The customer service employee registers the transaction manually and responds with the authorization code that is to be entered into the terminal.	Autor. kods 1234123412341234 - Derīgs:1114 (mmgg)
At the end of the transaction the terminal asks for confirmation for printing of the second receipt. When the red button is pressed the buyer's receipt is not printed.	Paņemiet kvīti un spied taust

The transaction is complete.



Notes:

- The transaction can be interrupted by pressing the RED button.
- In case of an error in entering the sum and the card number, corrections can be made using the YELLOW button.
- In order to enter letters, press and hold the respective key until the required letter appears.

Example: Where it is necessary to type 00001N, simply type 00001 and then hold number 6 until the letter N appears on the screen.

2.3 REVERSAL

In order to reverse the transaction, do the following:

ACTION	TERMINAL
The terminal is in the standby mode. Press the leftmost button on the key bar	Laipni lūdzam!
From the menu select “Atcelšana” (to navigate through the menu use ▼ ▲ key bar keys or central keys on the key bar) and then press the green key (ENTER) to confirm.	Transakcijas 1- Nosūtīt 2- Atcelšana 3- Kartes trans 4- Kvīts kopija 
Enter the number of the receipt that you wish to reverse and then press the green key (ENTER). Where the receipt number is not entered, the terminal shall reverse the last transaction.	Atcelšana Izsniegt kvīti Nr. -
The terminal shall request confirmation for the reversal. To continue press < Jā > or the green key (ENTER). To cancel press < Nē > or the red key (CANCEL).	Atcelšana? PAN:*****0001 Summa: 3.19 EUR Trans. Nr. 00001N Nē Jā
The chip card must be inserted in the terminal reader.	Uzrādiet karti -3.19 EUR 
E Remove the card from the terminal.	Karte kārtībā Paņemiet karti

The terminal shall commence automatic control and the following information will be displayed:

The terminal dials the control center’s number and performs the automatic control.	Pieslēgšanās... Lūdzu, uzgaidiet
The terminal receives an answer from the control center.	Transakcija Trans. Pabeigta
At the end of the transaction the terminal asks for confirmation for printing of the second receipt. When the red button is pressed the buyer’s receipt is not printed.	Paņemiet kvīti un spied taust.

The transaction is complete.

Seller's receipt

KARTES APMAKSAS KVĪTS Terminals	
KOMPĀNIJA NOSAUKUMS	
ADRESE	
Termināls: HPC111111 Reģ.: 12345673 Kase: 101	
Maksājumu karte	
VISA	
AID: A0000000012345	
PAN: *****0017	
CID: 40 TC:95D248A23412E422	
TVR: 0000000000 TSI:0000 CVMR:000000	
ATCELTS PIRKUMS	
Kvīts:123456 Laiks:12.11.2013 13:28:04	
Autoriz. nr.: 123223 T1	
Summa:	-3.19 EUR

Buyer's receipt


KARTES APMAKSAS KVĪTS Terminals	
KOMPĀNIJA NOSAUKUMS	
ADRESE	
Termināls: HPC111111 Reģ.: 12345673 Kase: 101	
Maksājumu karte	
VISA	
AID: A0000000012345	
PAN: *****0017	
CID: 40 TC:95D248A23412E422	
TVR: 0000000000 TSI:0000 CVMR:000000	
ATCELTS PIRKUMS	
Kvīts:123456 Laiks:12.11.2013 13:28:04	
Autoriz. nr.: 123223 T1	
Summa:	-3.19 EUR
Saglabājiēt kvīti bilances bārbaudei UZ redzēšanos!	

Notes:

- Only transactions in the terminal's memory can be reversed.
- Where the transaction has already been reversed or is not in the terminal's memory (e.g. already sent to the bank along with the transactions for the previous day), the terminal shall display the notification: **Neatrada transakc... Spiediet taus.**

3. SALES TRANSACTION WITH A CONTACTLESS CARD

3.1 SALES TRANSACTION

ACTION	SCREEN
The terminal is in the standby mode.	Laipni lūdzam!
Enter the sum of the transaction as a final sum. For instance, 319 (3.19 EUR) Then press the green key (ENTER).	SUMMA (EUR) Ievadiet summu... 3.19
The sum and the contactless payment logo are displayed on the screen. • In case of a contactless card transaction the card shall be touched against the pinpad's screen	Uzrādiēt karti 3.19 EUR 

The terminal shall perform automatic control and the following information will appear on the screen:

The terminal connects to the control center and performs automatic control.	Pieslēgšanās... Lūdzu, uzgaidiet
The terminal receives response from the control center.	Gaidām atbildi...
The terminal receives the transaction confirmation from the control center.	Trans. Pabeigta
At the end of the transaction the terminal asks for confirmation for printing of the second receipt. When the red button is pressed the buyer's receipt is not printed.	Paņemiet kvīti un spied taust

The transaction is complete.

Notes:

Terminal can ask to use the card's chip. (For instance, where the sum exceeds the contactless transaction's limit).	<u>Info</u> Ievietojiet karti POS terminālī
Insert the chip card in the reader and perform the payment just as you would in case of an ordinary chip card transaction.	<u>Kartes trans</u> 11.00 EUR Uzrādiet karti

Seller's receipt

KARTES APMAXSAS KVĪTS
Terminals

KOMPĀNIJA NOSAUKUMS
ADRESE
Reģ.: 12345673 Kase: 101
Termināls: HPC11111

Maksājumu karte
"Mastercard" Contactless

Mastercard
AID: A0000000012345
PAN: *****0017
CID: 40 TC:95D248A23412E422
TVR: 0000000000 TSI:0000 CVMR:000000

TRANSAKCIJA
Kvīts:123456 Laiks:12.11.2013 13:28:04
Autoriz. nr.: 123223 T1

Summa: 3.19 EUR

TRANS. PABEIGTA

.....

ID karte() Vadītāja apl.() Pase() Cits nr.

Buyer's receipt

Sveicintāti!

KARTES APMAXSAS KVĪTS
Terminals

KOMPĀNIJA NOSAUKUMS
ADRESE
Reģ.: 12345673 Kase: 101
Termināls: HPC11111

Maksājumu karte
"Mastercard" Contactless

Mastercard
AID: A0000000012345
PAN: *****0017
CID: 40 TC:95D248A23412E422
TVR: 0000000000 TSI:0000 CVMR:000000

TRANSAKCIJA
Kvīts:123456 Laiks:12.11.2013 13:28:04
Autoriz. nr.: 123223 T1

Summa: 3.19 EUR

TRANS. PABEIGTA
Saglabāji kvīti bilances pārbaudei
UZ redzēšanos!

Notes:**THE FIRST RECEIPT IS FOR THE SELLER AND THE SECOND ONE IS FOR THE BUYER**

- The transaction can be interrupted by pressing the RED button.
- In case of an error in entering the sum, corrections can be made using the YELLOW button.
- Where the receipt has no place for signature and the document number, the seller shall not ask for a signature and the document number of the card owner.

ACTION	SCREEN
Where the terminal prints a place for signature on the receipt, the seller shall ask for a signature and the document number of the card owner.	Paraksta piepr.
After that the terminal asks to control correctness of the signature (its correspondence to the signature on the document).	Paņemiet kvīti un spied taust.
If the signature is correct, press JĀ . It completes the transaction. If the signature is incorrect, press NĒ . Terminal cancels the transaction and prints out an error notification.	Paraksts pareizs? NĒ JĀ

Where for some reason authorization of the payment terminal fails, the error message is printed out along with the error code and explanation.

KĻŪDAS PAZIŅOJUMS
Terminals

KOMPĀNIJA NOSAUKUMS
ADRESE
Reģ.: 12345673 Kase: 101
Termināls: HPC11111

Maksājumu karte
'Mastercard' Contactless

Mastercard
AID: A0000000012345
PAN: *****0017
CID: 40 TC:95D248A23412E422
TVR: 0000000000 TSI:0000 CVMR:000000

TRANSAKCIJA
Kvīts:123456 Laiks:12.11.2013 13:28:04
Bankas: 121- Summa pārsniegts limits
Atgriez karti!

TRANSAKCIJA NEIZDEVĀS

3.2 VERBAL AUTHORIZATION

Verbal authorization is performed exactly as described for chip cards, see section 2.2

3.3 REVERSAL

In order to reverse the transaction, do the following:

ACTION	SCREEN
The terminal is in the standby mode. Press the leftmost key on the menu key bar.	Laipni lūdzam!

From the menu select “ Atcelšana ” (to navigate through the menu use ▼ ▲ keys or middle keys on the menu bar) and then press the green key (ENTER) to confirm.	Transakcijas 1- Nosūtīt 2- Atcelšana 3- Kartes trans 4- Kvīts kopija ↵
Enter the number of the receipt that you wish to reverse and then press the green key (ENTER). Where the receipt number is not entered, the terminal shall reverse the last transaction.	Atcelšana Izsniegt kvīti Nr. -
The terminal shall request confirmation for the reversal. To continue press < Jā > or the green key (ENTER). To cancel press < Nē > or the red key (CANCEL).	Atcelšana? PAN: *****0001 Summa: 3.19 EUR Trans. Nr. 00001N Nē Jā

In case of contactless transaction, the terminal does not require the card for reversal!

The terminal shall commence automatic control and the following information will be displayed:

The terminal dials the control center’s number and performs the automatic control.	Pieslēgšanās... Lūdzu, uzgaidiet
The terminal receives an answer from the control center.	Gaidām atbildi...
At the end of the transaction the terminal asks for confirmation for printing of the second receipt. When the red button is pressed the buyer’s receipt is not printed.	Paņemiet kvīti un spied taust.

The transaction is complete.

Notes:

- Only transactions in the terminal’s memory can be reversed.
- Where the transaction has already been reversed or is not in the terminal’s memory (e.g. already sent to the bank along with the transactions for the previous day), the terminal shall display the notification: **Neatrada transakc... Spiediet taus**

Seller’s receipt

KARTES APMAKSAS KVĪTS
Terminals

KOMPĀNIJA NOSAUKUMS
ADRESE
Reģ.: 12345673 Kase: 101
Termināls: HPC11111

Maksājumu karte
“Mastercard” Contactless

Mastercard
AID: A0000000012345
PAN: *****0017
CID: 40 TC:95D248A23412E422
TVR: 0000000000 TSI:0000 CVMR:000000

ATCELTS PIRKUMS
Kvīts:123456 Laiks:12.11.2013 13:28:04
Autoriz. nr.: 123223 T1

Summa: -3.19 EUR

Buyer’s receipt

KARTES APMAKSAS KVĪTS
Terminals

KOMPĀNIJA NOSAUKUMS
ADRESE
Reģ.: 12345673 Kase: 101
Termināls: HPC11111

Maksājumu karte
“Mastercard” Contactless


Mastercard
AID: A0000000012345
PAN: *****0017
CID: 40 TC:95D248A23412E422
TVR: 0000000000 TSI:0000 CVMR:000000

ATCELTS PIRKUMS
Kvīts:123456 Laiks:12.11.2013 13:28:04
Autoriz. nr.: 123223 T1

Summa: -3.19 EUR
Saglabājiet kvīti bilances pārbaudei
UZ redzēšanos!

4. SALES TRANSACTION WITH A MAGSTRIPE CARD

4.1 SALES TRANSACTION

ACTION	SCREEN
The terminal is in the standby mode. Enter the sum of the transaction as a final sum, for instance 319 (3.19 EUR) and then press the green key (ENTER) to confirm. In order to correct the sum, press the yellow key. To cancel the transaction, press the red key.	Laipni lūdzam!
Swipe the customer's card through the reader.	Uzrādiet karti 3.19 EUR 
	Gaidām atbildi...
Enter the last four digits of the card's number. Press the green key (ENTER) to confirm. The terminal controls, whether the entered numbers correspond to the information on the magstripe.	Četri pēdējie cipari: -

The terminal shall perform automatic control and the following information will appear on the screen:

The terminal dials the control center's number	Pieslēgšanās... Lūdzu, uzgaidiet
The terminal has established connection with the control center and performs the automatic control.	Gaidām atbildi... Lūdzu, uzgaidiet
The terminal receives an answer from the control center. The answer's code is shown on the screen.	Transakcija Trans. Pabeigta
At the end of the transaction the terminal asks for confirmation for printing of the second receipt. When the red button is pressed the buyer's receipt is not printed.	Paimkite kvitā is nusp. Klavišā

The transaction is complete.

Seller's receipt

KARTES APMĀKSAS KVĪTS
Terminals

KOMPĀNIJA NOSAUKUMS
ADRESE
Termināls: HPC111111 Reģ.: 12345673 Kase: 101
Maksājumu karte
VISA
PAN: *****0017
TRANSAKCIJA
Kvīts: 123456 Laiks: 12.11.2013 13:28:04
Autoriz. nr.: 123223 T1
Summa: 3.19 EUR

TRANS. PABEIGTA
Paraksts
.....
ID karte() Vadītāja apl.() Pase() Cits nr.

Card name
Card number

Number of the personal ID document, where the sum exceeds the control limit set for payment cards (filled in manually).

Buyer's receipt

Sveicintāti!
KARTES APMĀKSAS KVĪTS
Terminals

KOMPĀNIJA NOSAUKUMS
ADRESE
Termināls: HPC111111 Reģ.: 12345673 Kase: 101
Maksājumu karte
VISA
PAN: *****0017
TRANSAKCIJA
Kvīts: 123456 Laiks: 12.11.2013 13:28:04
Autoriz. nr.: 123223 T1
Summa: 3.19 EUR

TRANS. PABEIGTA
Saglabāiet kvīti bilances pārbaudei
UZ redzēšanos !

Where for some reason authorization of the payment terminal fails, the error message is printed out along with the error code and explanation.

**KĻŪDAS
PAZIŅOJUMS
Terminals**

KOMPĀNIJA NOSAUKUMS
ADRESE
Termināls: HPC11111 Reģ.: 12345673 Kase: 101
Maksājumu karte

VISA
AID: A0000000012345
PAN: *****0017
CID: 40 TC:95D248A23412E422
TVR: 0000000000 TSI:0000 CVMR:000000

TRANSAKCIJA
Kvīts:123456 Laiks:12.11.2013 13:28:04
Bankas: 121- Summa pārsniegts limits
Atgriezt karti!


TRANSAKCIJA NEIZDEVĀS

4.2 VERBAL AUTHORIZATION

Verbal authorization is performed exactly as described for chip cards, see section 2.2.

4.3 REVERSAL WITH A MAGSTRIPE CARD

In order to reverse the transaction, do the following:

ACTION	SCREEN
The terminal is in the standby mode. Press the leftmost button on the key bar	Laipni lūdzam!
From the menu select “Atcelšana” (to navigate through the menu use ▼ ▲ key bar keys or central keys on the key bar) and then press the green key (ENTER) to confirm.	Transakcijas 1- Nosūtīt 2- Atcelšana 3- Kartes trans 4- Kvīts kopija
Enter the number of the receipt that you wish to reverse and then press the green key (ENTER). Where the receipt number is not entered, the terminal shall reverse the last transaction.	Atcelšana Izsniegt kvīti Nr. -
The terminal shall request confirmation for the reversal. To continue press < Jā > or the green key (ENTER). To cancel press < Nē > or the red key (CANCEL).	Atcelšana? PAN:*****0001 Summa: 3.19 EUR Trans. Nr. 00001N Nē Jā
Swipe the customer’s card through the reader.	Uzrādiet karti -3.19 EUR 

The terminal shall request confirmation of the card's authenticity. To continue press < Jā > or the green key (ENTER). To cancel press < Nē > or the red key (CANCEL).	Četri pēdējie cipari: Vai 0001 četru Pēdējais cipars Nē Jā
The terminal confirms authenticity of the card.	Karte kārtībā

The terminal shall commence automatic control and the following information will be displayed:

The terminal dials the control center's number and performs the automatic control.	Pieslēgšanās... Lūdzu, uzgaidiet
The terminal receives an answer from the control center.	Gaidām atbildi... Lūdzu, uzgaidiet
At the end of the transaction the terminal asks for confirmation for printing of the second receipt. When the red button is pressed the buyer's receipt is not printed.	Paimkite kvitā is nusp. klavišā

The reversal is complete.

Seller's receipt

KARTES APMAKSAS KVĪTS
 Terminals

KOMPĀNIJA NOSAUKUMS
 ADRESE
 Reģ.: 12345673 Kase: 101
 Termināls: HPC11111
 Maksājumu karte

VISA
 PAN: *****0017

ATCELTS PIRKUMS

Kvīts: 123456 Laiks: 12.11.2013 13:28:04
 Autoriz. nr.: 123223 T1

Summa: -3.19 EUR

Buyer's receipt

Sveicintāti!
KARTES APMAKSAS KVĪTS
 Terminals

KOMPĀNIJA NOSAUKUMS
 ADRESE
 Reģ.: 12345673 Kase: 101
 Termināls: HPC11111
 Maksājumu karte

VISA
 PAN: *****0017

ATCELTS PIRKUMS

Kvīts: 123456 Laiks: 12.11.2013 13:28:04
 Autoriz. nr.: 123223 T1

Summa: -3.19 EUR

Saglabājiet kvīti bilances pārbaudei
 UZ redzēšanos !

Notes:

- Only transactions in the terminal's memory can be reversed.
- Where the transaction has already been reversed or is not in the terminal's memory (e.g. already sent to the bank along with the transactions for the previous day), the terminal shall display the notification: **Neatrada transakc... Spiediet taus**

5. REPEATED PRINTOUT

Where necessary the terminal can print a copy of the receipt.

ACTION	SCREEN
The terminal is in the standby mode. Press the leftmost button on the key bar	Laipni lūdzam!
From the menu select “Kvīts kopija” (to navigate through the menu use ▼ ▲ key bar keys or central keys on the key bar) and then press the green key (ENTER) to confirm.	Transakcijas 1- Nosūtīt 2- Atcelšana 3- Kartes trans 4- Kvīts kopija
Enter the number of receipt that you wish to reverse and then press the green key (ENTER). Where the receipt number is not entered, the terminal shall print out the last receipt. Where no receipt is found “ Neatrada transakc... Spiediet taus ” message is displayed.	Kvīts kopija Izsniegt kvīti Nr. -
Tear off the receipt and press any key.	Paņemiet kvīti un spied taust.

Note:

- Repeated printout is only possible with regard to transactions performed on the same day.

6. REPORTS

ACTION	SCREEN
The terminal is in the standby mode. Press the leftmost button on the key bar	Laipni lūdzam!
From the menu select “Info” (to navigate through the menu use ▼ ▲ key bar keys or central keys on the key bar) and then press the green key (ENTER) to confirm.	Transakcijas 1- Nosūtīt 2- Atcelšana 3- Kartes trans 4- Kvīts kopija 5- Info
Select Sūtīt ierakstu if you wish to receive a copy of the previous sending report Select Patr Transakc if you wish to receive today’s report, <u>without sending transactions</u> . Select Skatīt transak if you wish to receive more information on a specific receipt.	Info 1- Sūtīt ierakstu 2- Patr Transakc 3- Skatīt transak

7. CLOSING THE DAY

7.1 AUTOMATIC SENDING OF TRANSACTIONS

Daily transactions can be sent to the bank either automatically or manually. Automatic sending is performed at the time programmed in the terminal. While automatic sending is in process no transaction can be performed!

At the end of the communication session the terminal shall issue the report that demonstrates the number of transactions and the total sum.

TRANSAK. FAILS			
Nr 1			
Nosūtīšanas laiks: 01.01.2011 1:00			
KOMPĀNIJA NOSAUKUMS			
ADRESE			
Termināls: HPC111111 Reģ.: 12345673 Kase: 101			
Valūta: LVL (428)			
Set	"VISA"		
Transakcijas	1	3.19	
Atceltas	1	-3.19	
Kopsumma	2	0.00	
<hr/>			
Transakcijas	1	3.19	
Atceltas	1	-3.19	
Kopsumma	2	0.00	
Received 1 pcs, 0.00 units			
Transakcijas nosūtītas OK			

NB! IF THIS REPORT IS NOT PRINTED OUT, APPARENTLY THE TRANSACTIONS HAVE NOT REACHED THE BANK!

Automatic sending is not performed where

- No transactions were made after the last report has been sent
- Sending was not successful, since the terminal was not plugged into the power network or the communication line used by the terminal was not available.

Where automatic sending fails:

- SEND TRANSACTIONS MANUALLY

NB! Where automatic sending fails, contact customer service of Nets Estonia.

7.2 SENDING TRANSACTIONS MANUALLY


ACTION	SCREEN
The terminal is in the standby mode. Press the leftmost button on the key bar	Laipni lūdzam!
From the menu select "Reversal" (to navigate through the menu use ▼ ▲ key bar keys or central keys on the key bar) and then press the green key (ENTER) to confirm.	Transakcijas 1- Nosūtīt 2- Atcelšana 3- Kartes trans 4- Kvīts kopija
If you wish to send transactions, press < Jā > or press the green key (ENTER).	Transakcijas Pieteikt darīj.? Pārlicināts?

	Nē	Jā
The terminal shall dial the control center's number.	Pieslēgšanās...	
The terminal sends transactions	Lūdzu, uzgaidiet Transakcijas	Nosūtīt

At the end of the communication session the terminal shall issue the report that demonstrates the number of transactions and the total sum.

8. REPLACEMENT OF THE PAPER ROLL

If a red line appears on receipts, the paper roll shall be replaced. Use only special thermal paper for the terminal.

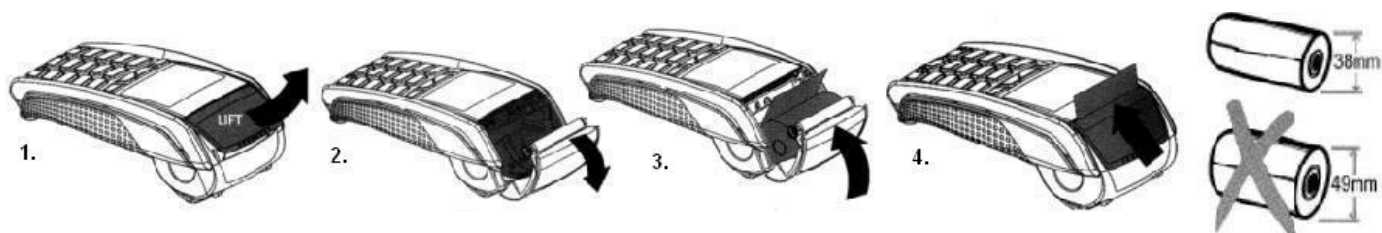

- 1.-2. Open the paper roll cover
3. Place a new roll in place
4. Close the cover, tear off any excess paper